

Steam ironing mode

Turn the temperature control knob (J) to position ●● or ●●●. Check that there is enough water in the water tank. When you set too low temperature, the water can drop from the soleplate. Put the iron on its heelplate, wait a moment until the indicating light (F) goes off.

Set the steam control (C) to the appropriate steam setting. By moving the steam control to the position 0 the amount of steam emitted is reduced.

Steam booster

Turn the temperature control knob (J) to position ●● or ●●●. Now press the steam booster button (E). We do not recommend you to use the steam booster for lower ironing temperatures.

In order to avoid excessive escape of water from the soleplate, do not depress the steam booster button and hold down for longer than 5 seconds at a time.

Using the spray nozzle

Check that there is adequate water in the water tank.

By pressing the spray button (D) several times the fabric can be dampened as required for ironing. The temperature setting has no effect upon this.

Dry ironing mode

Move the steam control (C) to the "0" position (no steam).

CLEANING AND STORAGE

Before cleaning the iron, always pull the mains plug out of the mains socket! Leave the iron to cool down before cleaning and storing!

Any residues on the soleplate of the iron can be removed by using a moist cloth. Never use any abrasive agents, gasoline or thinner to clean the iron.

From time to time clean the water tank of contaminant residues. Put some water into the water tank, shake the iron gently and remove the water again.

The cleaning should be carried out at least once a month.

When storing the steam iron, please empty the water tank. Set the steam control regulator to the "0" position. Stand the iron upright on its heelplate to avoid damaging the stainless steel soleplate.

Instruction for handling with used packaging/disposal of the product upon the end of operating life

Used packaging/product upon the end of operating life should be dumped on the place appointed for dumping of the waste, or into the junk.

The logo for the brand 'efiniti' features the word in a bold, lowercase, sans-serif font. A large, thin, curved line arches over the letters, starting from the left and ending to the right of the 'i'.**SASI 1201****220-240V 50/60Hz 1200W**

1. SAFETY INSTRUCTIONS

Please read these instructions for use carefully before using the steam iron.

- Before you plug the appliance in, check if the voltage specified on the label of the appliance corresponds to the mains voltage in your home.
- Do not use the appliance in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not place the appliance on windowsills.
- Make sure that the electrical cable and plug cannot come in contact with water or humidity.
- Do not spray the appliance with any liquid. Never immerse any part of the appliance in water or any other liquid.
- This appliance is for domestic use only and should not be used industrially. Do not use the appliance outdoors.
- Exercise extreme care whenever the appliance is to be used near the children. Always keep the children away from the appliance!
- Disconnect the appliance from the power supply if it is to be moved, cleaned or if it is not used.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance if the electrical cable is damaged or whenever any possible internal failure or incorrect operation has been detected.
- Do not attempt to make any repairs yourself. Always contact the official repair services for either mechanical or electrical repairs.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Unplug the appliance by holding the plug; do not pull on the electrical cable.
- Do not use the appliance for other than intended use.
- Before filling or emptying the water tank, remove the plug from the wall socket.
- When you finished ironing, when you leave the iron for a short time, or before cleaning the appliance, put the iron upright and remove the plug from the wall socket.
- If you drop the appliance, have it checked by a qualified service centre before using it again.
- Do not put any chemically descaled water, vinegar, starch in the water tank.
- Only use the iron for ironing the clothes.
- Do not touch soleplate while the iron is switched on or before cooling down.
- Do not iron the clothes on a body!

General description

- A. Spray nozzle
- B. Water filling inlet
- C. Variable steam control
- D. Spray button
- E. Powerful steam button
- F. Indicating lamp
- G. Supply cord
- H. Swivel cord
- I. Transparent water tank
- J. Temperature control dial
- K. Maximum water level
- L. Stainless steel soleplate



Notes for use

Some components of the steam iron are lightly lubricated. This could cause a small amount of smoke to be emitted while using the iron for the first time. This will disappear soon. Before using the iron for the first time, please remove all attached labels and protective foil film from the soleplate of the iron. Now clean the soleplate with a piece of damp cloth.

Filling the steam iron with water (for steam ironing and spraying)

Always remove the plug from the wall socket and set the steam control to position 0 before filling the steam iron with water.

Please use normal tap water for filling the iron. In regions where is an extremely high content of calcium in the water, it is recommended to fill the water tank with distilled water. Do not use chemically descaled water.

Move the steam control regulator (C) to the 0 position (no steam). Place the iron upright on a heat-resistant surface. Open the cover of the water tank (B) and carefully fill the water tank. Do not overfill the water tank with water. Make sure that you only filled up the water tank to the MAX mark shown on the side.

Selecting the ironing temperature

- Man-made fibre and silk
- Wool
- Cotton and linen

Put the iron upright on its heelplate and turn the temperature control knob (J) to the correct temperature setting for ironing.



Plug the appliance in. The indicating lamp (F) will illuminate and indicate that the iron is being heated up. When the lamp goes off, the required temperature is reached, and iron is ready for use. The indication lamp will switch on and off while ironing.