




SASI 1801



220-240V 50/60Hz 1800W

KNOW YOUR IRON

- | | |
|------------------------------|------------------------------|
| A. Spray nozzle | H. Supply cord |
| B. Water filling inlet | I. Swivelling cord protector |
| C. Variable steam control | J. Soft hand grip |
| D. Powerful steam button | K. Transparent water tank |
| E. Spray button | L. Temperature control dial |
| F. Auto-shut-off pilot light | M. Soleplate |
| G. Supply pilot light | |

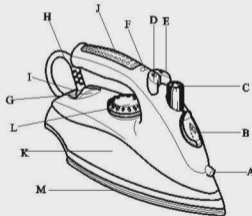

Important

- . Please read these instructions in conjunction with the illustrations before using the appliance.
- . Before using for the first time, check if the voltage rating on the typeplate corresponds to the mains voltage in your home.
- . Never use the appliance if it is damaged in any way.
- . Before use for the first time remove any sticker or protective foil from the soleplate. Clean the soleplate with a soft cloth.
- . When you have finished ironing, and also when leaving the iron even for a short while:
 - set the steam control to position O;
 - remove the mains plug from the wall socket.
- . Take care that child cannot touch the iron when hot and that they cannot pull the mains cord.
- . Remove the mains plug from the wall socket before filling the iron with water or pouring out the remaining water after use.
- . Do not unplug the iron by pulling on the supply cord.
- . Never immerse the iron or the stand in water.
- . Some parts of the iron have been slightly greased and as a result the iron may slightly smoke when switched on for the first time. This(harmless)phenomenon will cease after a short while.
- . Do not put vinegar or other descaling agents into water reservoir.
- . Do not use chemically descaled water.
- . The cordset should not be allowed to touch the soleplate when it is hot.
- . Regularly check if the mains cord is still in a good and safe condition.
- . The ejected steam is hot and therefore hazardous. Never direct the steam towards people.
- . This appliance is not intended for use by young child or infirm persons without supervision.

- . The user must not leave the iron unattended while it is connected to the supply.
- . Young children should be supervised to ensure that they do not play with the appliance.
- . If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- . To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.

HOW TO USE

General description

1. Textile which has been applied (gloss, crinkle, relief etc.) is best ironed at lower temperature.
2. Sort the laundry according to ironing temperature: put wool with wool, cotton with cotton, etc. The iron heats up more quickly than it cools down. Therefore, start ironing articles that need to be ironed at lowest temperature, such as those made of synthetic fibre.
3. Temperature guide

Follow the ironing instructions on the garment label. If there is no instructions but you do know the kind of fabric, please consult the table.

Warning: If the fabric consists of various kinds of fabrics, always select the temperature required by the most delicate fibre.

Fabric	Temperature control	Ironing methods
Synthetic fibres nylon	*	Iron the reverse side. Do not use the spray function, as spraying could cause stains.
Silk wool	**	Iron the reverse side to prevent shiny spots.
Cotton linen	***	You'd better set the iron to a steam position.




SASI 1801



220-240V 50/60Hz 1400W

KNOW YOUR IRON

- | | |
|------------------------------|------------------------------|
| A. Spray nozzle | H. Supply cord |
| B. Water filling inlet | I. Swivelling cord protector |
| C. Variable steam control | J. Soft hand grip |
| D. Powerful steam button | K. Transparent water tank |
| E. Spray button | L. Temperature control dial |
| F. Auto-shut-off pilot light | M. Soleplate |
| G. Supply pilot light | |

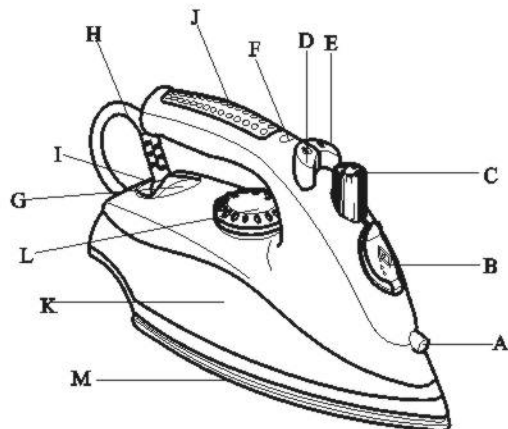

Important

- . Please read these instructions in conjunction with the illustrations before using the appliance.
- . Before using for the first time, check if the voltage rating on the typeplate corresponds to the mains voltage in your home.
- . Never use the appliance if it is damaged in any way.
- . Before use for the first time remove any sticker or protective foil from the soleplate. Clean the soleplate with a soft cloth.
- . When you have finished ironing, and also when leaving the iron even for a short while:
 - set the steam control to position 0;
 - remove the mains plug from the wall socket.
- . Take care that child cannot touch the iron when hot and that they cannot pull the mains cord.
- . Remove the mains plug from the wall socket before filling the iron with water or pouring out the remaining water after use.
- . Do not unplug the iron by pulling on the supply cord.
- . Never immerse the iron or the stand in water.
- . Some parts of the iron have been slightly greased and as a result the iron may slightly smoke when switched on for the first time. This(harmless)phenomenon will cease after a short while.
- . Do not put vinegar or other descaling agents into water reservoir.
- . Do not use chemically descaled water.
- . The cordset should not be allowed to touch the soleplate when it is hot.
- . Regularly check if the mains cord is still in a good and safe condition.
- . The ejected steam is hot and therefore hazardous. Never direct the steam towards people.
- . This appliance is not intended for use by young child or infirm persons without supervision.

- . The user must not leave the iron unattended while it is connected to the supply.
- . Young children should be supervised to ensure that they do not play with the appliance.
- . If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- . To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.

HOW TO USE

General description

1. Textile which has been applied (gloss, crinkle, relief etc.) is best ironed at lower temperature.
2. Sort the laundry according to ironing temperature: put wool with wool, cotton with cotton, etc. The iron heats up more quickly than it cools down. Therefore, start ironing articles that need to be ironed at lowest temperature, such as those made of synthetic fibre.
3. Temperature guide

Follow the ironing instructions on the garment label. If these is no instructions but you do know the kind of fabric, please consult the table.

Warning: If the fabric consists of various kinds of fabrics, always select the temperature required by the most delicate fibre.

Fabric	Temperature control	Ironing methods
Synthetic fibres nylon	*	Iron the reverse side. Do not use the spray function, as spraying could cause stains.
Silk wool	**	Iron the reverse side to prevent shiny spots.
Cotton linen	***	You'd better set the iron to a steam position.