

HAIR DRYER

OPERATION MANUAL

MODEL: (SAHD1200)



Please read these instructions carefully before installing and operating the HAIR DRYER .
Record in the space below the SERIAL NO. found on the nameplate on your HAIR DRYER
and retain this information for future reference.
SERIAL NO.:

www.efiniti.biz
efiniti sales, singapore



SAHD 1200

IMPORTANT SAFEGUARDS

- ~ Please read this Instruction manual carefully before use and keep in a safe place for future reference.
- ~ Before the first connecting of the appliance check that voltage indicated on the rating label corresponds the mains voltage in your home
- ~ Do not use the hair dryer for any other purpose than that described in this instruction manual.
- ~ Do not use outdoors.
- ~ Always unplug the hair dryer from the power supply when not in use and before cleaning,
- ~ To protect against the risk of electric shock, do not immerse the appliance in water or in any other liquids.
- ~ Do not take this product into a bathroom or use near a water basin
- ~ Do not spray aerosol products when the hair dryer is in operation.
- ~ it is not recommended that this appliance should be used by children.
- ~ Do not leave the hair dryer switched on whilst unattended.
- ~ Do not use other attachments than those supplied.
- ~ Never carry or suspend the hair dryer by the cord,
- ~ Do not wrap the cord around the appliance as this will cause damage.
- ~ Do not operate after malfunction or damage to cord.
- ~ Test the appliance and the cord regularly for damage, if there is a damage of any kind, the appliance should not be used Do not repair the appliance yourself, but rather consult an authorized expert.
- ~ If, however, the airflow is inadvertently obstructed during use, the built-in thermal safety cutout will automatically switch off the appliance. The hair dryer will switch on again automatically after cooling down for a few minutes.

IMPORTANT:

- ~ Keep your hair away from the immediate vicinity of the air inlet opening. Keep air inlet filter dust and fluff free,
- ,, Do not restrict air inlet or outlet otherwise the product may overheat.

INSTRUCTION FOR USE

SPEED SETTINGS

- ~ 0 -off;
- ~ 1 - medium speed for gentle drying;
- ~ 2 - high speed for rapid drying.

COOL SHOT

- ~ This appliance is featured with "Cool shot" function, which allow rapid cooling of hair and longer lasting curl To activate "Cool shot" function simply press the Cool shot button in front of the handle. As the Cool shot button is released, the appliance returns to its normal setting.

CARE AND CLEAN

- ~Switch off the hair dryer unplug from the power supply
- ~Wipe over the housing using a soft damp cloth.
- ~Remove and wash the concentrator in warm soapy water.
- ~ Do not use hard abrasive cleaners.
- ~ Ensure all parts are wiped dry with a soft dry towel.

STORAGE

- ~Ensure the hair dryer is completely cool and dry
- ~store the appliance in a cool dry place

SPECIFICATION

Power supply	230V. 50HZ
Power	1000W